


REPLACEMENT OF CVS TURNTABLE MAIN FUSE


If the main fuse should happen to blow (usually when someone with 230 VAC power) has the turntable set for 120 VAC), you must open up the turntable to replace it. It is a small 1 ampere fuse.

Step 1) Open turntable as per instruction in our Support area.

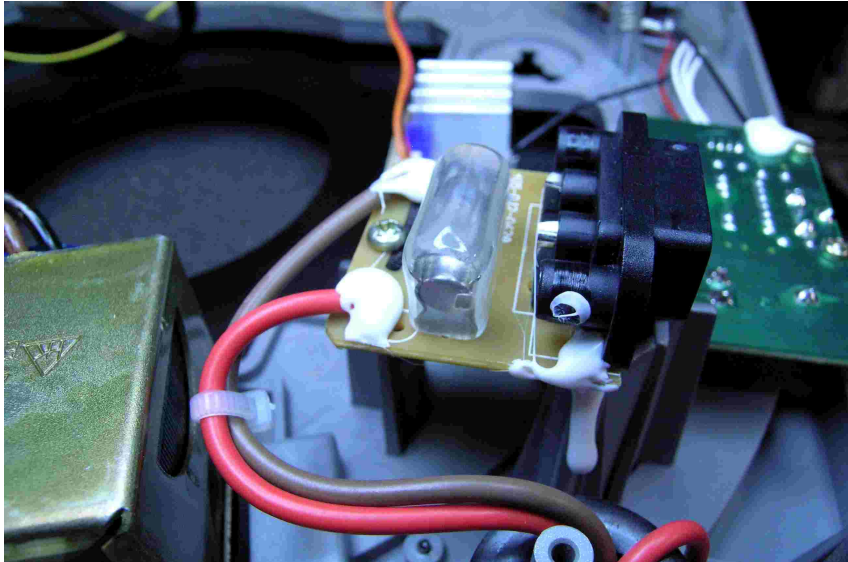

Step 2) Locate power receptacle. The fuse is covered with a soft plastic insulator.

Step 3) Remove the insulator to reveal the fuse.

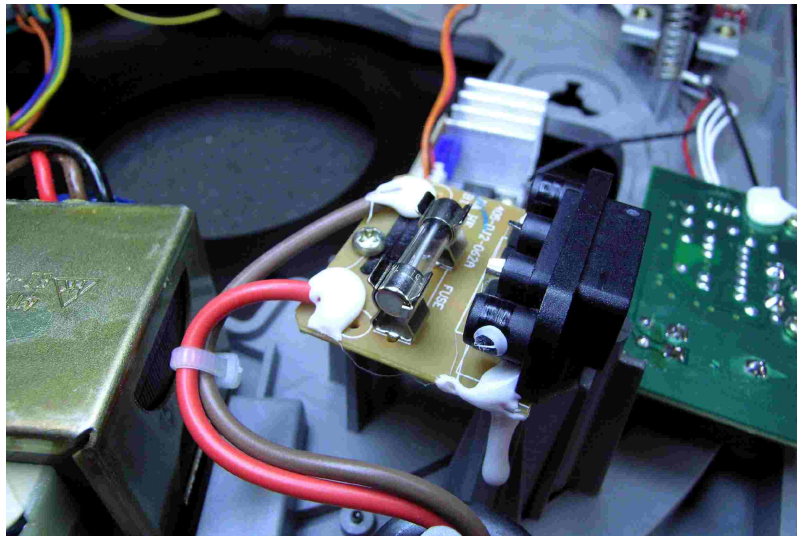

Step 4) replace the fuse and the insulator.

Step 5) replace the turntable cover.